


Cycle Chart

TIMER SWITCHING FUNCTIONS IN MINUTES

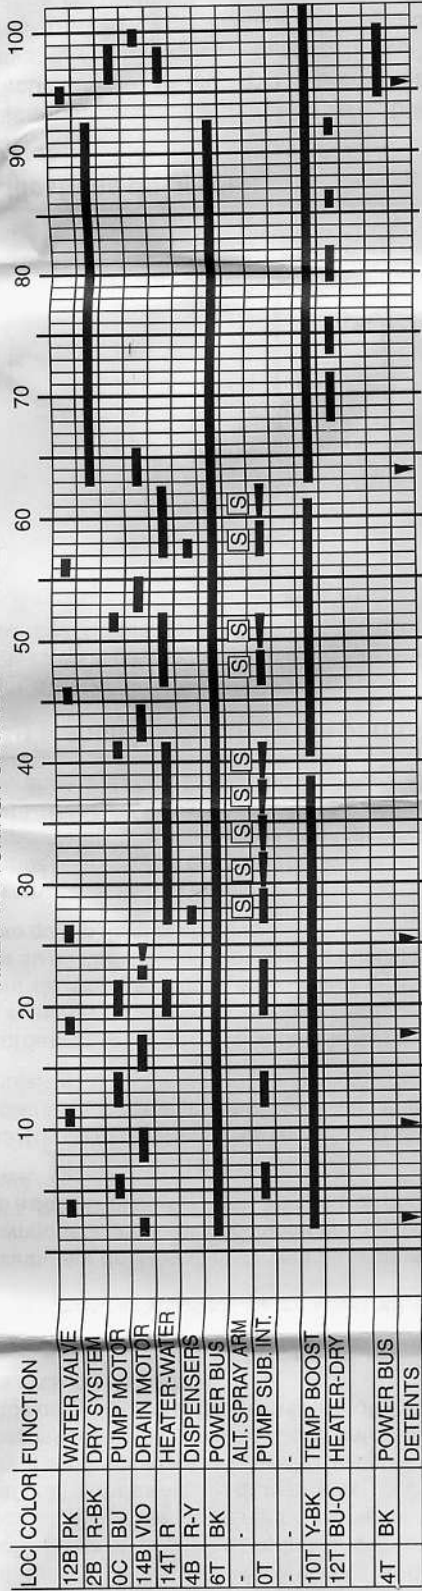

ONLY LOWER SPRAY ARM OPERATES IN 1ST WASH, 1ST RINSE AND 2ND RINSE.
 SPRAY ARMS ALTERNATE IN 2ND WASH, 3RD RINSE AND 4TH RINSE.

[S] SPRAY ARMS ALTERNATE. DUE TO SPACE, SPRAY ARMS ALTERNATE MORE THAN CYCLE CHART SHOWS.

O=OPEN
 X=CLOSED
 E=EITHER

SWITCH	C	A	CYCLE
			POTS & PANS
	X		HEAVY WASH
	X		NORMAL WASH
	X		SHORT/LIGHT
			RINSE & HOLD
	-	X	HEAT DRY ON
	-	-	HEAT DRY OFF

1 st WASH 7 1/2 MIN.	1 st RINSE 7 1/2 MIN.	2 nd WASH 19 1/2 MIN.	2 nd RINSE 7 1/2 MIN.	3 rd RINSE 10 1/2 MIN.	4 th RINSE 9 MIN.	DRY HOT OR COOL 27 MIN.	OFF	RESET

RINSE AND HOLD
 6 MIN.